


# Camera Stabilizer Plans

By Christian Salinas

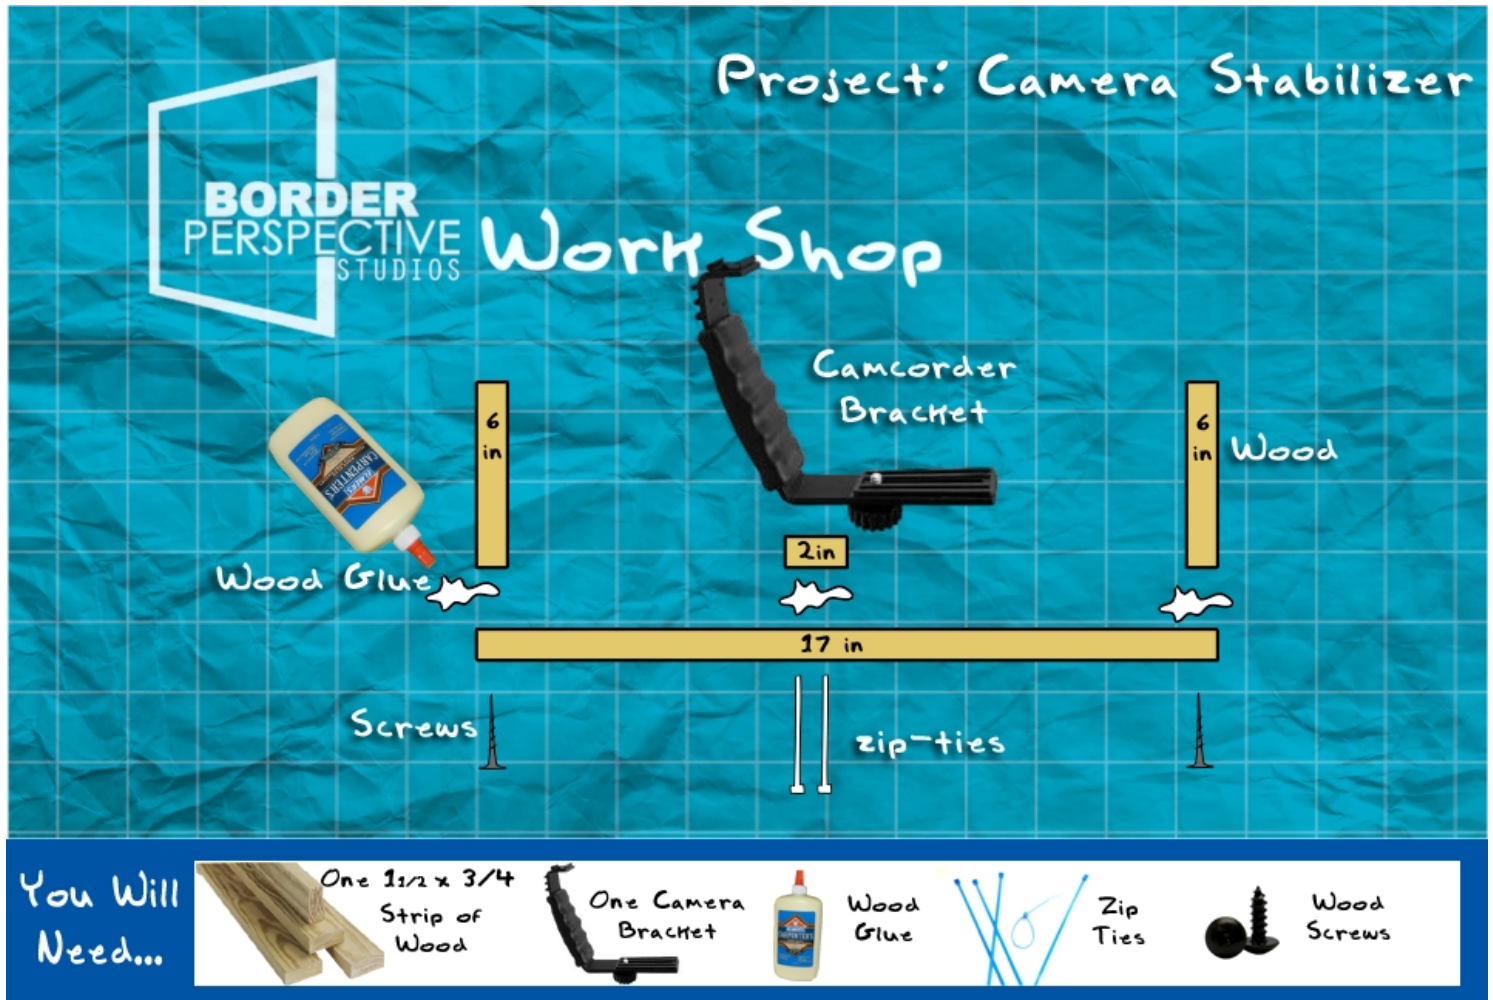

## Step One

Cut the 1 1/2 x 3/4 in strip of wood into four parts; (2) 6in pieces, (1) 17in piece and (1) 2in piece

## Step Two

Screw the (2) 6in pieces, and glue the 2in piece, just slightly off-center to the 17in piece, and allow glue to dry (now would be a good time to paint it whatever color you'd like)

## Step Three

Secure the Camcorder Bracket to the stabilizer on top of the 2in piece using the zip ties (you will need more than one)

**\*Caution:** This assembly is not recommended for use on cameras over 3-5lbs in weight, this is a **TRY AT YOUR OWN RISK** devise, We are not responsible for any damages or injuries caused by this assembly.